

Display

Date: October 9, 2000

Subject: CORRECTING HORIZONTAL/VERTICAL SYNC

Italicized information in green applies to Europe, Middle East and Africa.

DESCRIPTION

If the front edge of the G board contacts the G board bracket, a short-circuit of sync signal may occur, causing picture to lose sync.

To restore H/V sync, perform the following modification procedure.

NOTE: This procedure requires approximately 20mm (19mm in width) UL tape.

SERIAL NUMBERS

BVM-D14H1E	2,000,001–2,000,025
BVM-D14H1U	2,000,001-2,000,071
BVM-D14H5E	2,000,001–2,000,040
BVM-D14H5U	2,000,001-2,000,450

MODIFICATION PROCEDURE

See Figure 1.

- 1. Remove four screws and remove upper cabinet.
- 2. Remove seven BVTT 3 x 6 screws and remove upper rear panel.
- 3. Remove two PSW 4 x 8 screws from lower rear panel.

NOTE: Do *not* remove lower rear panel from the G board bracket.

- 4. Remove one PSW 3 x 12 screw securing the FBT.
- 5. Hold G board shield case with one hand, and draw out the G board by 5cm with the other hand.

See Figure 2.

6. Affix UL tape as shown.


CONFIRMATION

Verify that connectors are firmly connected.



Model: BVM-D14H1E, BVM-D14H1U BVM-D14H5E, BVM-D14H5U

Serial No: SEE TEXT

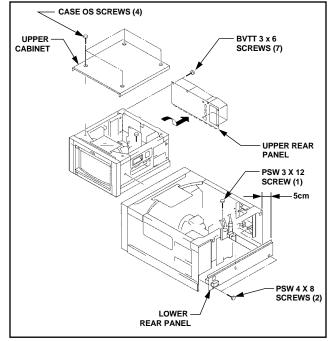



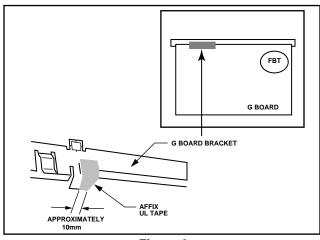


Figure 2

DPMO00-028R

Page 1 of 1

Groadcast Professional Products Asia • Sony Australia • Sony Broadcast & Professional Europe • Sony Canada Ltd. • Sony Electronics Inc. USA • Sony Products Professional Latin America