

Display

Date: **October 23, 1995**Subject: **HOW TO USE 20-PIN REMOTE**Model: **PVM-1351Q/1354Q/1954Q**Serial No: **200,001 AND HIGHER****DESCRIPTION**

Use of the 20-pin remote is not described in the operation manual. (The following information will be added to the next manual edition.)

PROCEDURE

1. To make the remote mode operative, connect pin 17 (REMOTE) on the 20-pin remote terminal to GND.
2. Connect a pin of the desired function on the 20-pin remote terminal to GND.

NOTES:

- The TALLY (pin 7) of the 20-pin remote terminal is operative without grounding pin 17.
- By grounding the REMOTE terminal of the 20-pin remote, the input voltage is switched to the shift register IC, which allows the MPU to control the REMOTE function.