# **SD Tool Installation Manual**

Thanks for purchasing the Maximus SD Tool for Corona 4GB, this manual will instruct you how to properly install and use it to read and write your Corona 4GB Nand.

Tools Required:

- XBOX 360 Open Kit (X8 or similar)
- Soldering Iron
- De-solder braid (to fix mistakes)
- Multi-meter
- 5 cm of wire (Kynar 30 AWG or similar)
- Personal Computer Running Windows
- Optional: USB extension or USB Hub
- J-Runner latest version or the SDTools software

#### Step 1. Console Disassembly

The first step is to get the console disassembled, there are many tutorials on the Internet, and here you have some quick link: <u>http://youtu.be/yW-ubXYthT8</u>

#### Step 2. SD Tool Install

There are 2 ways to install and use the Maximus SD Tool; one is using the provided Quick Solder Board (beginners friendly). The other is using the provided pin header (for experienced installers). Use the one you feel comfortable with.

Installing with Quick Solder Board:

- Attach one of the supplied FFC cables in the connector of the Quick Solder Board as shown.



\*\*\* Please note to un-latch the connector you need pull outward \*\*\*



- Align the supplied Quick Solder Board on the connector U1D1 as shown in the Picture

-Solder the golden Pads as shown



-Make sure JMP1 is bridged as shown



- Now skip to "Step 3. Preparing to Read the Nand"

Installing with Pin Header:



-Align the supplied pin header on the connector U1D1 as shown in the Picture

-Solder each pin tail (BOTH SIDES), taking care not bridging, if you bridge something by mistake use the De-solder braid to clean up



-Attach a Single wire from Oscillator to PIN 15 of header NOTE: THIS WIRE CAN REMAIN IN PLACE ALL THE TIME, THIS WILL DISABLE THE CRYSTAL ONLY WHEN THE SD TOOL EXTERNAL MODULE IS PLUGGED



-Attach one of the supplied FFC cable on the Module, Bridge the E\$2 point, Plug in the connector of the female module as shown.



## Step 3. Preparation for Reading the Nand:

On this step we will be reading your Corona Nand. Please note it's very important to have a backup of this dump. If the things go wrong later this will help you to restore the console to its working state.

Warning!! For this step we will work with the main-board plugged to the power. Make sure you place the console over something non-conductive to prevent any short. Also note we will have the console plugged but not actually turned on (that is front LED's all off)

-Plug the SD shaped board into the supplied USB Card Reader as shown

-Plug the other end of the FFC on the connector as shown

-Plug the power transformer on the console, leave the console on its standby state, don't try to power it on from the front panel

-Plug the USB Card Reader into the USB port of the console (one USB extension or USB Hub will allow more freedom)



-If all goes well you will see windows installing the default drivers for the Reader and when done you will see a notification window asking to format the detected drive letter as shown. Note, this message is normal and you SHOULD NOT format the drive under any circumstances, so press "CANCEL" on that screen. Take note of the Drive letter that windows assigned to this drive as will be important on the next steps



#### Step 4. Reading the Nand (Backup)

We will show you steps on how to read the Nand using J-runner and SD tools, you can do similar stuff with AutoGG or other software you feel comfortable with

-Open J-Runner (make sure you have latest version)

-Press the Read Nand button

-A screen will appear asking for the type of Nand, choose Corona 4GB

Xenon	Advanced	
Zephyr	<u>Help</u>	
Falcon		
Opus		
Jasper 16MB		
Jasper 256MB	Eul Dump 2	
Jasper 512MB		
Trinity		
Corona		
Corona 4GB		

-Another Screen will appear showing you a list of the detected devices, make sure you select the one with the Drive letter noted earlier.

JR Drives					×
Refresh Drive List	Shov	All Devices			
Drive	Letter	Туре	Label	Format	Size (MB)
PhysicalDrive1					0
PhysicalDrive2					0
PhysicalDrive3					0
PhysicalDrive4					0
PhysicalDrive5					0
PhysicalDrive6		Removable			3588
File: C:\jrunner\J-Runn	er v02 Bet	a (280) Core Pacl	<\output\nanddu	ump1.bin	
Read	Full Du	mp			
Write					Close
Progress:					

-Press Read and wait while the Nand is read and verified

-Click Close and on the Main window you should see the 2 dumps being verified

Progress				
Checking Files Finished Checking I:\ Reading from I:\to Vaanddump I.bin Done! in 0:04 min:sec Vaanddump2.bin Done! in 0:04 min:sec Comparing Cant check for ha Nands are the sam	Files C:\jrunner\J-Runner v0 C:\jrunner\J-Runner v0 d blocks. No Spare data d blocks. No Spare data e	2 Beta (280) Core Pack\output 2 Beta (280) Core Pack\output . Possibly Corona 4GB . Possibly Corona 4GB	] ←	E
xeBuild Version:	1.05	DashLaunch Versior	n: 3.02	

-Take note of the path of the file and make a backup of this file on a safe place, this is a 48 MB dump and its

all you need to restore your console if something goes wrong later.

-Optional: If you feel paranoid you can do a full backup of the Nand (approximate 3.5 GB), this will take much more minutes to read and verify.

PhysicalDrive3 PhysicalDrive4 PhysicalDrive5			0 0
PhysicalDrive6	EA	Removable	3588
File: C:\jrunner\J-Rur	nner v02 Be	ta (280) Core Pack\output\nanddump1.bir	·
Read	🔽 Full Du		
Write			Close
Progress:			

#### Step 5. Generating and Writing Xell Image

-Click on Create ECC button and wait for the generation complete, check that you have a success message

J-Runner v0.2 Beta (282)		- • •
Tools Images XeBuild Patches Advanced Settings About		
Nand / CoolRunner           Read         Rash           Nand         Create           ECC         Write ECC           Units         Nand	XeBuild Options Dash Version Retail @ Glitch O Jtag RGH - DashLaunch Patches	DEMON
No. Reads 2 🔄 CoolHunnes Programming Corona 4GB 🐵 U2 LPT	Advanced XeBuild Options Use edited settings	
Source File C:\jrunner\J-Runne 2 Beta (280) Core Pack\ou Nand	Nand Info KV Info Bad Blocks	<b>THE</b>
Additional File C: yrunner VJ-Runner v02 Beta (280) Core Pack Vol	2BL [CB] LDV PD	
CPU Key Re-Init	4BL [CD]	<b>NUMER</b>
Progress	58L [CE]	
* constructing new image	6BL [CF] Patch 0 6BL [CF] Patch 1	<b>HAO</b>
* base size: 70000 * No separate recovery Xell available! * Hash Layout: Ko0. 0x1FF (0x200 bytes) Header Ko200. 0x7FF (0x500 bytes) Padding 0x8000. 0x3FFF (0x500 bytes) SMC Ko40000 CyTEFF (0x500 bytes) SMC	7BL [CG] Patch 0 7BL [CG] Patch 1 LDV PD LDV PD	RISEN
0x8000.0x48F100x14F00yee01C8 A 13121 0x34F0.0x1162F(0x74004yee0)C8 B 13121 0x17530.0x1762F10x74004yee0)C9 U52 0x17530.0x87FFF10x480000yee03C0 U5452 0x17530.0x87FFF10x480000yee03X400400 0x100000.0x7FFF10x480000yee03X400000yee03X400000 0x100000.0x13FFFF10x480000yee03X40000yee03X400000 0x100000.0x13FFFF10x480000yee03X40000yee03X400000 0x100000.0x13FFFF10x480000yee03X40000yee03X400000 0x1000000.0x13FFFF10x480000yee03X40000yee03X400000 0x100000.0x13FFF10x480000yee03X40000yee03X400000 0x10000000000000000000000x40000000000	CPU Key Database         Xbox IP : 192.168.0           Show Working Folder         Get CPU Key	
NOT adding Spare Data	Scan IP Range Exit Monitor COM	ON SALE NOW !
xeBuild Version: 1.05 DashLaunch Version: 3.02		

-Click on the Write ECC button and select your Drive letter on the screen that will appear, then click on Write Button.

J-Runner v0.2 Beta (282)						
Tools Images XeBuild P Nand / CoolRunner Read Nand CoolRun	Patches Advanced Settings	About About About XeBuild Dash W Age Nand RGH	Options ersion	<ul> <li>Retail          <ul> <li>Glito</li> <li>nch Patches</li> </ul> </li> </ul>	sh 🔘 Jtag	DEMON
No. Reads 2 2	IRunner Programming			Advanced XeB	uild Options	UL ALC
Corona 4GB	Prives			×	ngs	ALL PROPERTY
Source File C:\irunne	Refresh Drive List Show	All Devices				TUS
	Drive Letter	Type Label	Format	Size (MB)		
Additional File C: yrunne	PhysicalDrive1			0		
CPU Key	PhysicalDrive2			0		
	PhysicalDrive4			0		
	PhysicalDrive5			ő		
Progress	PhysicalDrive6 I:\	Removable		3588		
* constructing new image * base size: 70000 * No separate recovery Xe * Rash Layout: 6x0bx1FF (0x200 bytes) H 0x200bx3FF (0x300 byt 0x4000bx3FFF (0x300 byt 0x4000bx3FFF (0x1AF0 b) 0x8000bx3AEF (0x1AF0 b)	File: C:\yrunner\J-Runner v02 Beta	(280) Core Pack\output\image_000	00000.ecc			RISEN
0x9AF0.0x1162F (0x7B40 0x11630.0x1762F (0x6000 0x17630.0x8FFFF (0x4091 0xC0000.0xFFFF (0x4001 0x100000.0x13FFFF (0x4001 0x100000.0x13FFFF (0x4001	Write			Close	I Key	
Done!	Progress:				Range	UN SALE NUW !
Written into output		<b>T</b>	Exit	Monit	pr COM	CONSOLES
xeBuild Version: 1.05	DashLaunch Ve	ersion: 3.02				

## Step 6. Install Glitcher and boot into Xell

Before install the Glitcher make sure you disconnect the SD shaped board from the FFC cable, the pin header or the Quick-solder board can be leaved installed.

We are not covering the Glitcher installation on this manual. For installation of any glitcher you can use the same installation diagram is the same as for the previous Corona.

Remember that on the Corona / Corona 4GB main-boards Xell will boot but will not give any video output on the screen, this is normal.

You can retrieve your keys by, either, looking at the IP address assigned to the console by your router (on the router configuration pages). If you find the IP address just type it on the XBOX IP box on J-Runner. If you don't have the IP you can use the Scan IP Range function or type "Xell" (without the quotes) as the IP

	CPU Key	/ Database	192.168.0	
	Opt	tion 1	Get CPU Key	
	Ор	tion 2	Scan IP Range	
J	E	Exit	Monitor COM	

#### Step 7. Generate and Write the Hacked Dash

–With the CPU Key retrieved you can now generate the RGH2 dashboard image. Select RGH2 as the type and also we suggest 15574 as the dashboard, also make sure the Glitch option is selected. Then press Create Image as shown

ed Settings About	YaPuild Options	
te ECC Create Write Image Nand	Dash Version 15574  Retail Gitch Jtag RGH2 DashLaunch Patches	DEMON
	Advanced XeBuild Options Use edited settings	
)) Core Pack\ou Nand	Nand Info KV Info Bad Blocks	THE
I) Core Pack \or	2BL [CB]	

-Now re-connect the USB SD Card reader to the PC and check that it got Detected

-Once detected press the Write Nand Button. On the screen that will appear choose the Drive letter assigned to the Nand and click Write

Drive	Letter	Туре	Label	Format	Size (MB)
PhysicalDrive1					0
PhysicalDrive2					0
PhysicalDrive3					0
PhysicalDrive4					0
PhysicalDrive5					0
File: C:\jrunner\J-R Read	unner v02 Beta	a (280) Core Pac	k \output \image_0	000000.ecc	

- Now disconnect the SD Shaped board from the FFC and test booting.

## Step 8. Closing the Console

If you choose to have the FFC installed for later update the console without having to open, all you need to do is route the FFC thru the AV port slot as shown.



Every time you need to read or write the Nand in the future all you have to do is connect the SD shaped board on the FFC and have the console plugged (in standby)