Display



## Video Products Technical Bulletin 30-2002-115

DATE: July 22, 2002 SUBJECT: SHIFT OF VERTICAL HOLD

MODEL: SSM-724AMR

SERIAL NO: 414,165-414,244

## **DESCRIPTION**

To correct a picture roll (unlocked vertical synchronization), perform the following modification procedure.

## **MODIFICATION PROCEDURE**

- 1. Open the cabinet.
- 2. Feed a CCIR (625) signal.
- 3. On the A Board, Side A (See Figure 1), adjust RV501 (V HOLD) until the picture is steady.

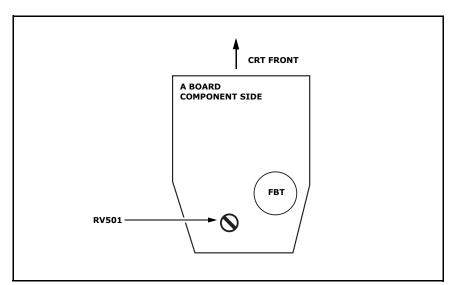


Figure 1

- 4. Continuing to adjust RV501, find the range in which the vertical hold is steady, and set RV501 to the center of this range.
- 5. Close the cabinet.

DPMO01-058