

E3 ODE PRO User Manual v1.23

The E3 ODE PRO is the best ODE for PS3 in the world . NO restart, No eject, easy to upgrade and easy to use.

E3 ODE PRO support all slim console include 2XXX, 3XXX and 4XXX .

We recommend user upgrade your PS3 console to latest firmware before install E3 ODE PRO

Some user want change PS3 inner harddisk, We recommend user change PS3 harddisk before install E3 ODE PRO

Please note: Every time unplug PS3 power cable, user need wait 5s and then plug PS3 power cable and restart PS3.

Features List:

 
- No eject and NO restart
- Select game and run automatically
- Supports all slim PS3's including previously "unbreakable" 2k5,3k and 4k systems!
- Select game, switch game and switch mode from E3 OS directly !
- Play games on ODE mode or BD drive mode
- Homebrew supported
- Easy upgrade and easy use
- Updatable via USB storage
- High quality components used throughout
- Built at a high tech facility
- Easy installation on 25xx,3xxx and 4xxx series Slim and Super Slim series consoles with solder board (quick solder board)
- Advanced software onboard and frequent free updates
- BD Movie support to follow (In a future update)
- PS1 and PS2 ISO support to follow (in a future update)

Selection of E3 ODE PRO or PS3 BD DRIVE mode

Enter the E3 ODE PRO mode


After install E3 ODE PRO, PS3 console will enter the E3 ODE PRO MODE by default .

If it is on the PS3 BD DRIVE MODE , user can choose from E3 OS , after restart PS3, it will enter E3 ODE PRO mode .

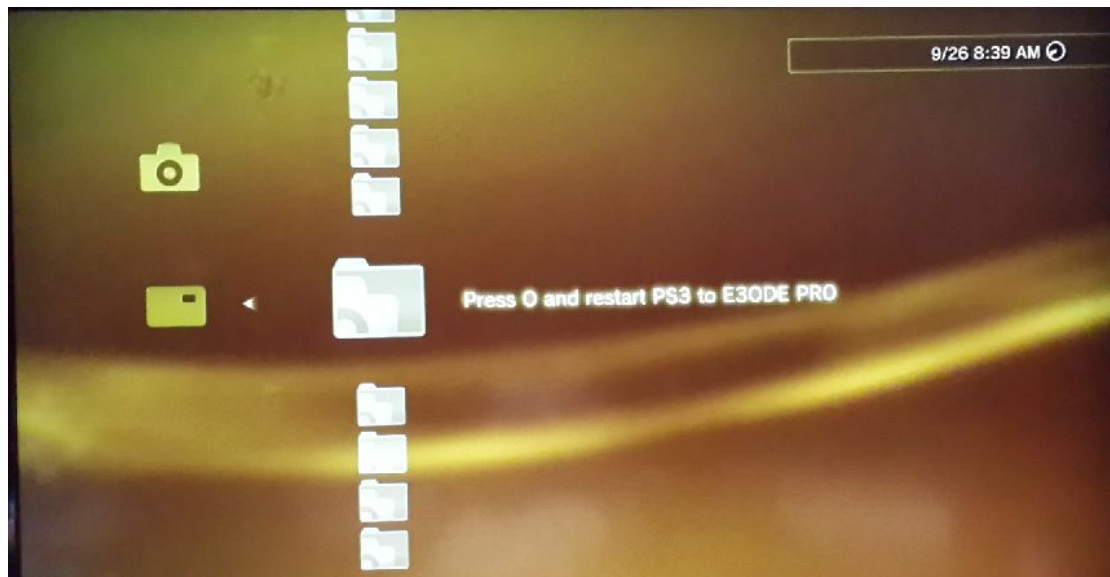

Enter the PS3 BD Drive mode

 Running PS3, and choose from E3 OS . After restart PS3, it will enter PS3 BD DRIVE mode .

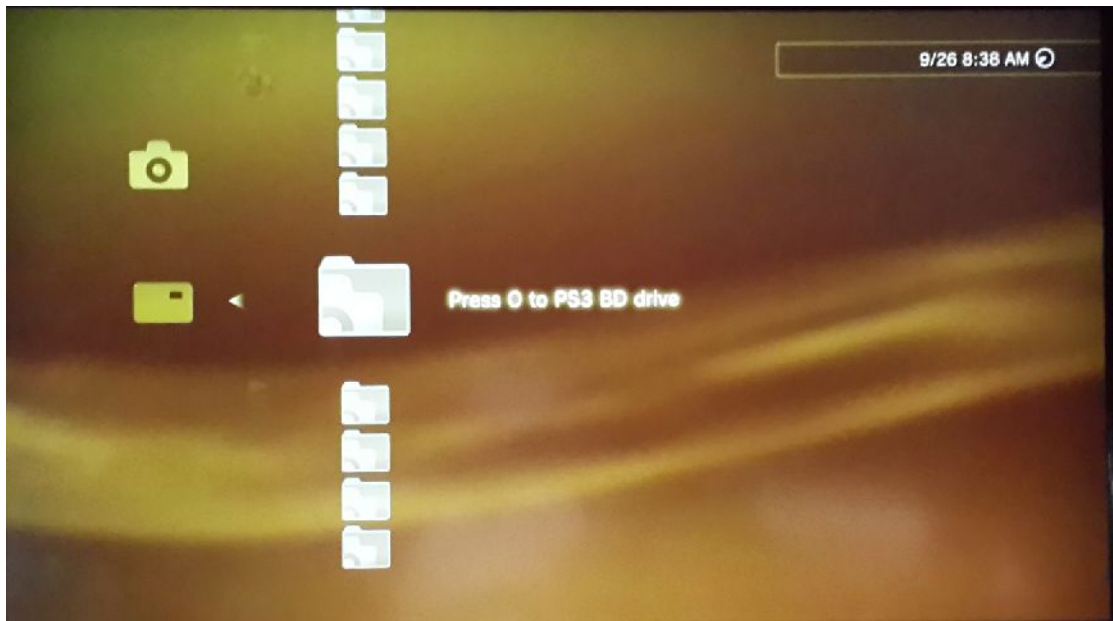

Connecting USB storage

Connect the USB storage to the E3 USB board which plug into the PS3 USB port .



USB mass storage preparation

The E3 ODE PRO supports reading files from the vast majority of USB HDD's and USB pen drives available in the market.

PS3 ISO games must be placed in root directory . The ISO game can be created with E3 ODE TOOL .

As a user convenience we also support iso files generated by the cobra ISO tool v1.0-v.2.1 .



Booting related issues:

 
- E3 ODE PRO requires an original disc as boot disc to run games from HDD. The game disc used must be supported by the E3 ODE PRO database. A current list of supported titles is available in the downloads section of our website. We will provide updates to expand the list of supported titles.


Using E3 ODE OS

1: Enter E3 ODE OS


Browse PS3 Photo category, user can find a USB Device(E3 OS1.0 Press V)


If it is slow to enter E3 ODE OS, please decrease the number of games. For example, if only one game inside USB DISK, the speed will be fastest.

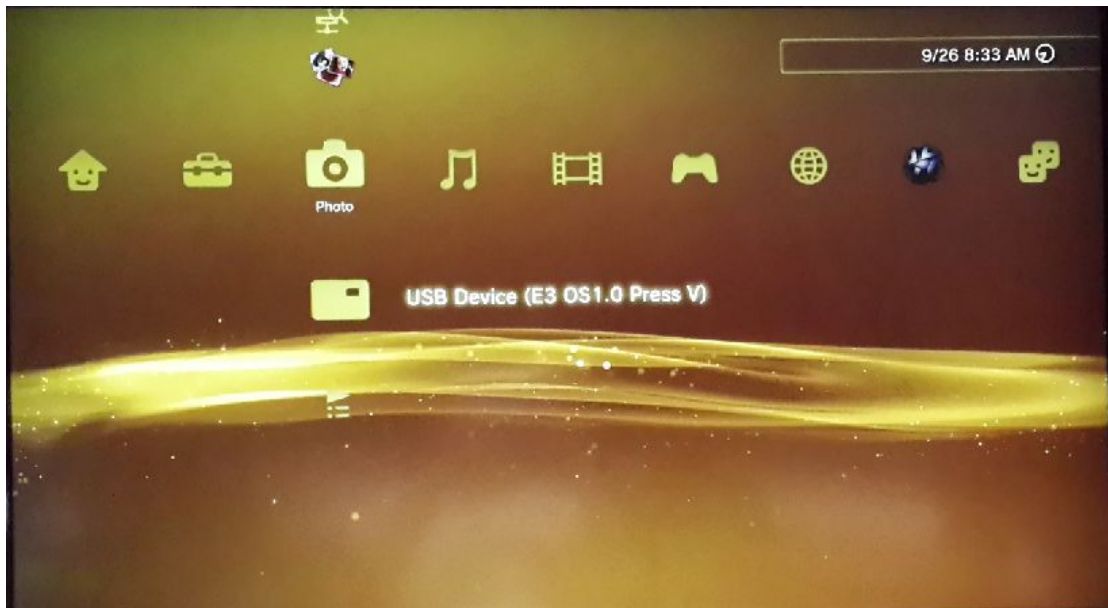

Press  , user will enter this menu



 
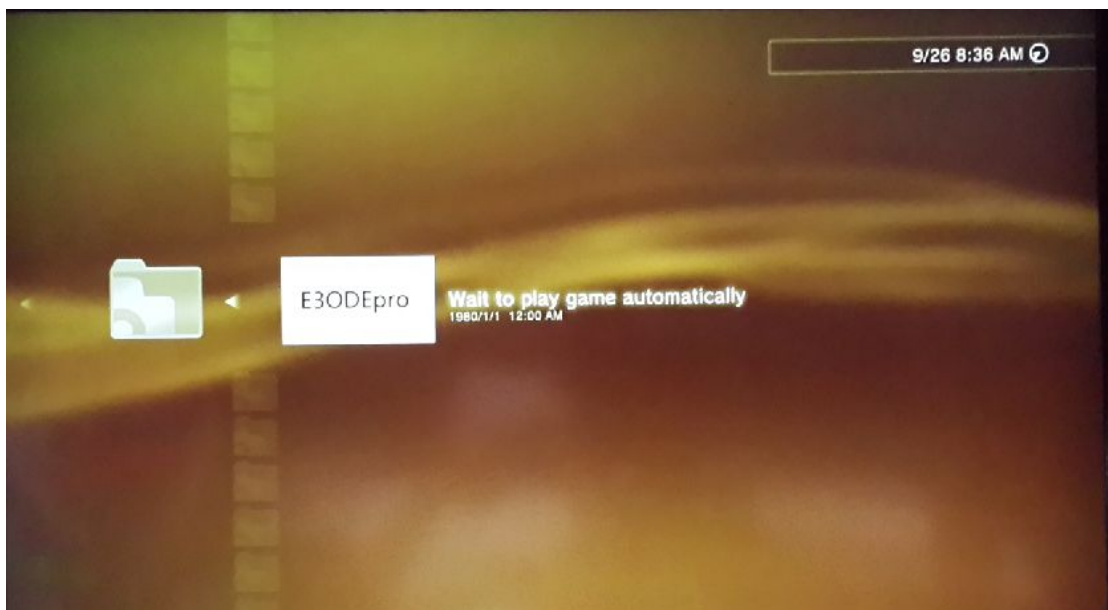 
and then press  to browse all ISO game and function

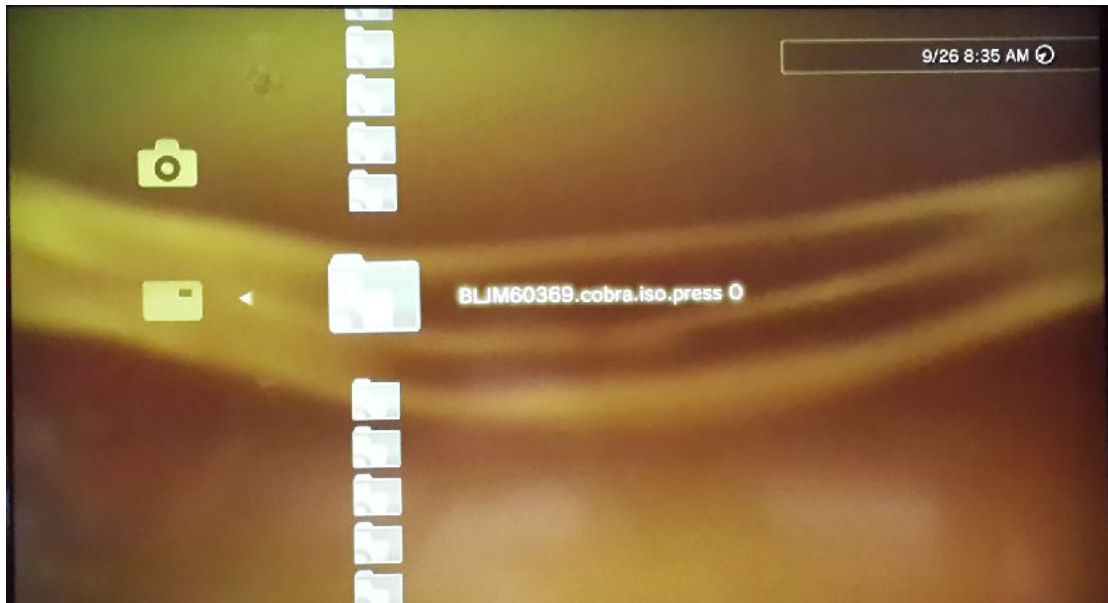

2: run game from E3 ODE OS


On 4xxx console

Be sure that there has boot disc inside PS3, press  to select a game, and wait the game run automatically.




On 2xxx-3xxx console




Press  to select a game, and return to PS3 game menu. Insert boot disc and waiting game run automatically

 


If there has boot disc inside PS3 already, user need Press  to select a new game, and then select the game you want to play . The game will run automatically.

3: Switch to a new game



After quit game, enter E3 ODE OS , press  to select the function menu as following picture. The USB Device(E3 OS1.0) will reload , and then enter E3 OS to select the game you want.

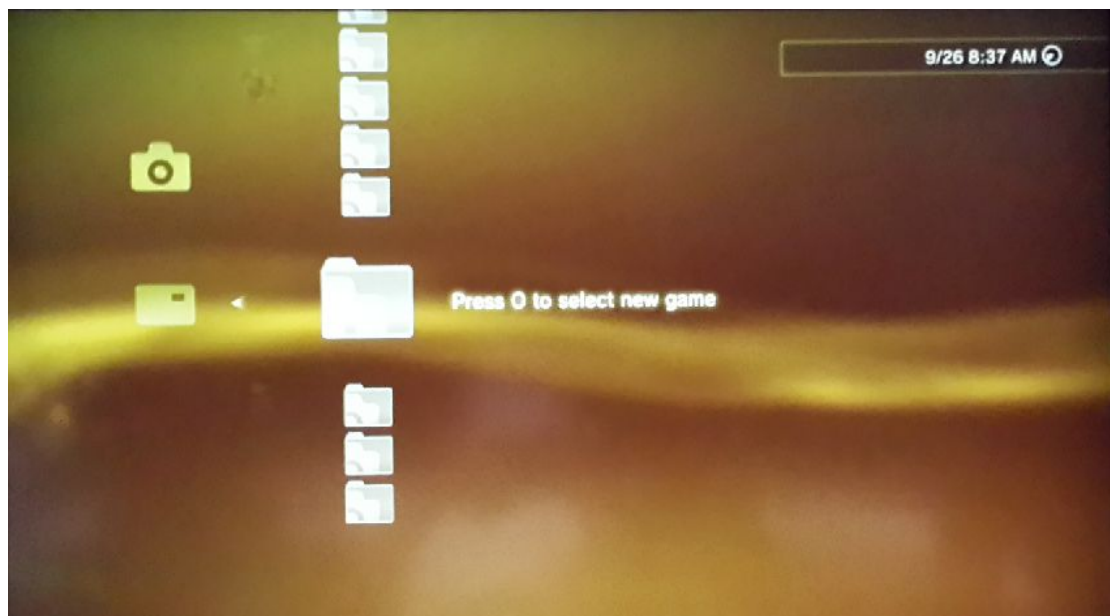



Upgrade E3 ODE PRO


Download e3ode_update.bin file from official web, and copy into boot directory of USB disk. Install this USB disk into E3 ODE PRO, and enter E3 OS . Press



 to select update function menu.

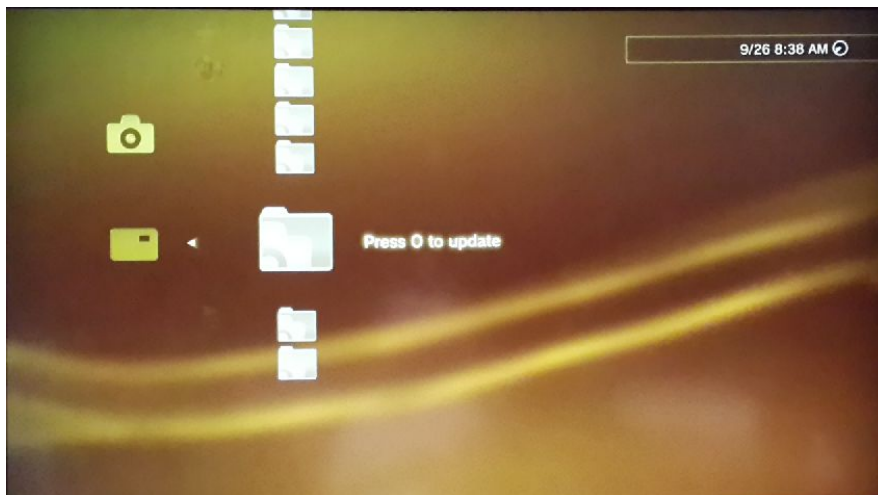

 
You will see following picture come out after press  to update, just wait USB Device (E3 OS) remove and then power off and unplug PS3 power cable.

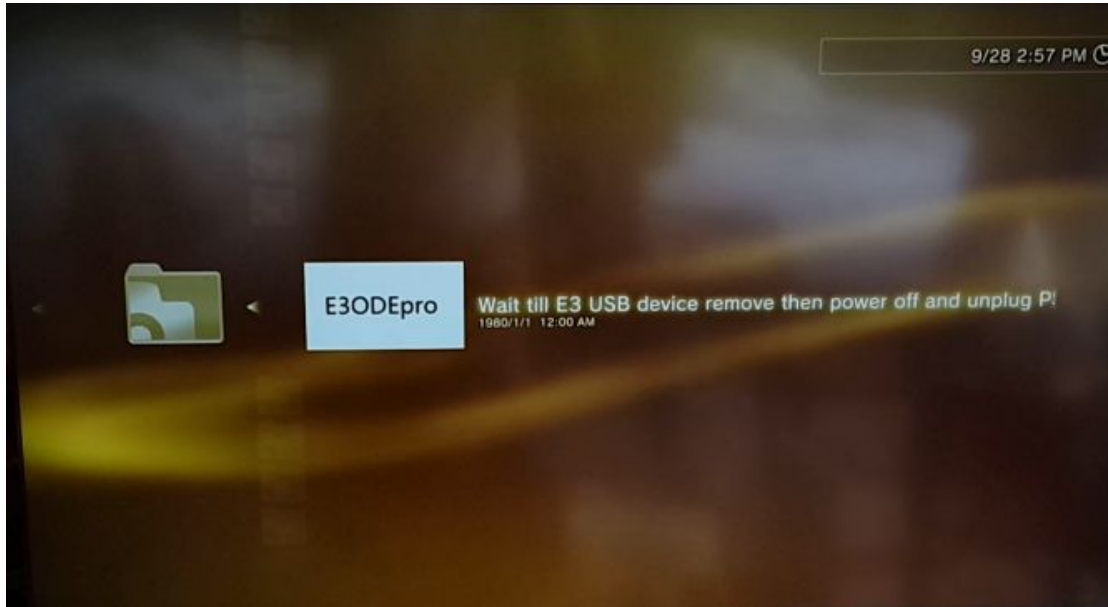

Plug PS3 power cable and start PS3 to enter menu, you will see a newer version of E3 ODE, it means update successfully.

Add more boot disc type on E3 ODE PRO

 Download keys.rar file , extract and copy the keys folder into root directory of the user game harddisk.

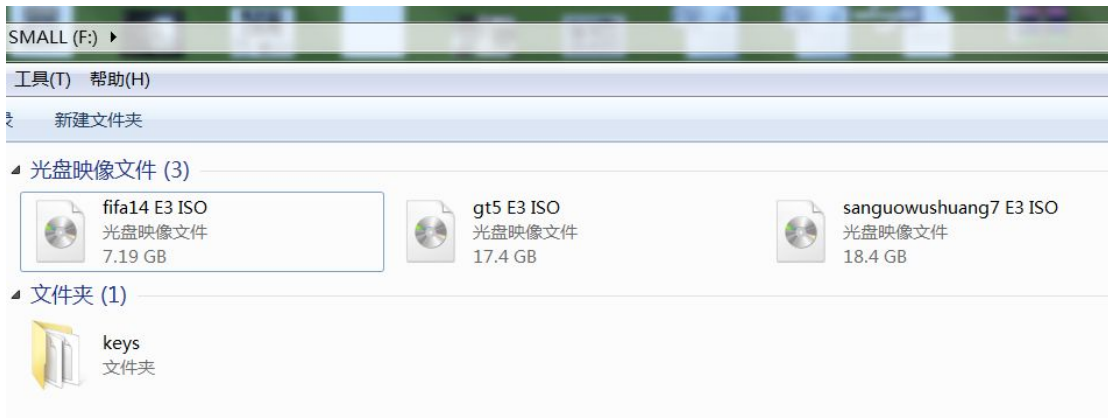

Update PS3 firmware to the latest firmware .

1: Select Press O to PS3 BD Drive and restart PS3, it will

enter the PS3 BD DRIVE MODE.

2: Remove E3 USB STICK from PS3 USB port .

3: Upgrade PS3 official firmware .

Change PS3 inner harddisk

1: Select Press O to PS3 BD Drive mode and restart PS3, it will enter the PS3 BD DRIVE MODE.

2: Power off PS3 , unplug PS3 power cable and change the PS3 inner harddisk.

3: Plug PS3 power cable and start PS3, PS3 should update automatically.