



Video Products Technical Bulletin 30-2003-093

DATE: **March 24, 2003**SUBJECT: **REUSE IC551 WHEN REPLACING D BOARD**MODEL: ***PVM-2130QM***SERIAL NO: **ALL**

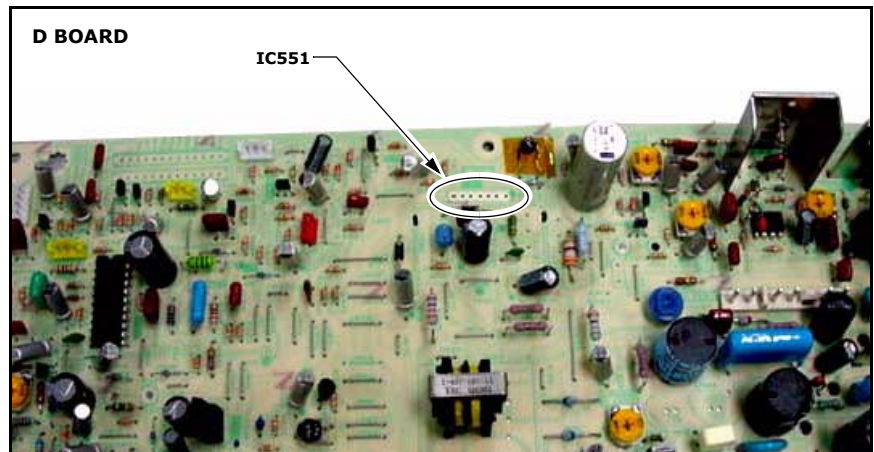
Italicized information in green applies to customers outside the United States.

DESCRIPTION

IC551 on the D board is no longer available. When replacing the D board, remove IC551 from the former board and install it on the new board as follows.

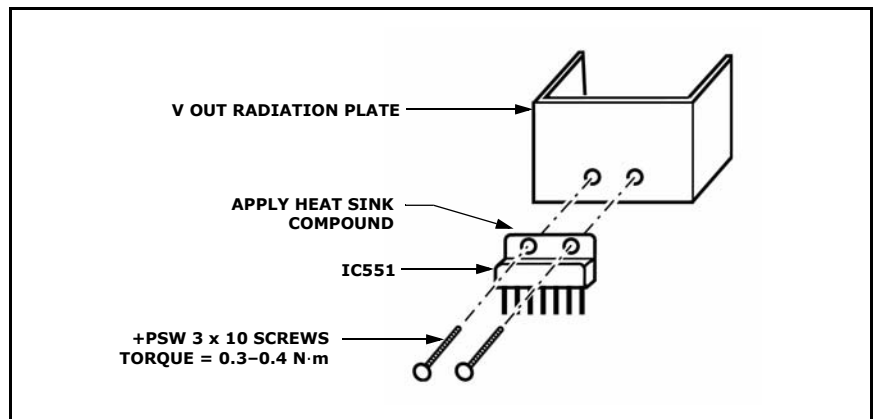
MODIFICATION PROCEDURE

1. Remove IC551 from the former D board. (See Figure 1.)

**Figure 1**

2. Attach IC551 to the V OUT radiation plate using the two +PSW 3 x 10 screws. (See Figure 2.)

NOTE: Do not allow spacing between the radiation plate and IC551 to exceed .5 mm.

**Figure 2**

3. Mount IC551 on the new D board.

DPMO02-027