

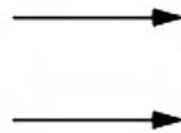


# Direction of install

- Always match top of NBM w/ top of 68K
- 68K is called "CPU1" on motherboard

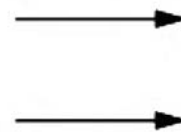


(top of 68K CPU)

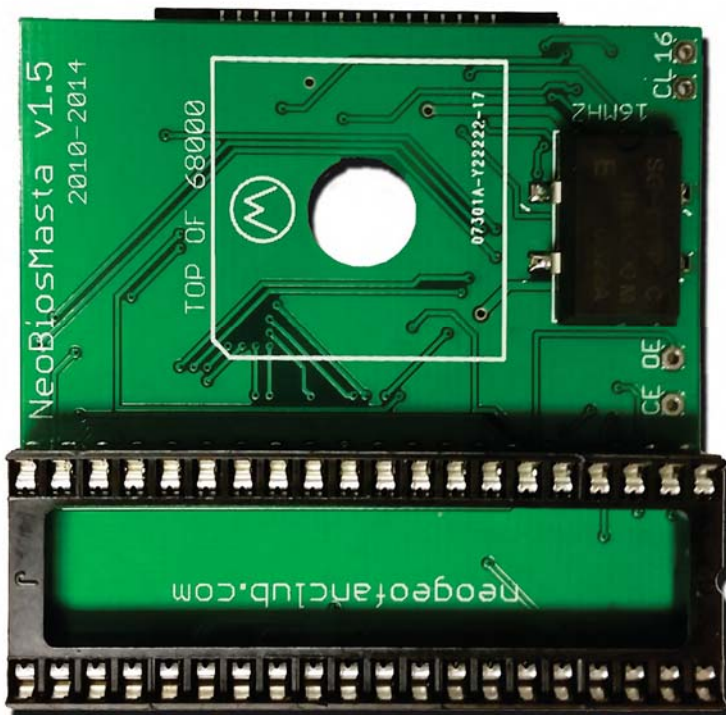

(top of 68K CPU)



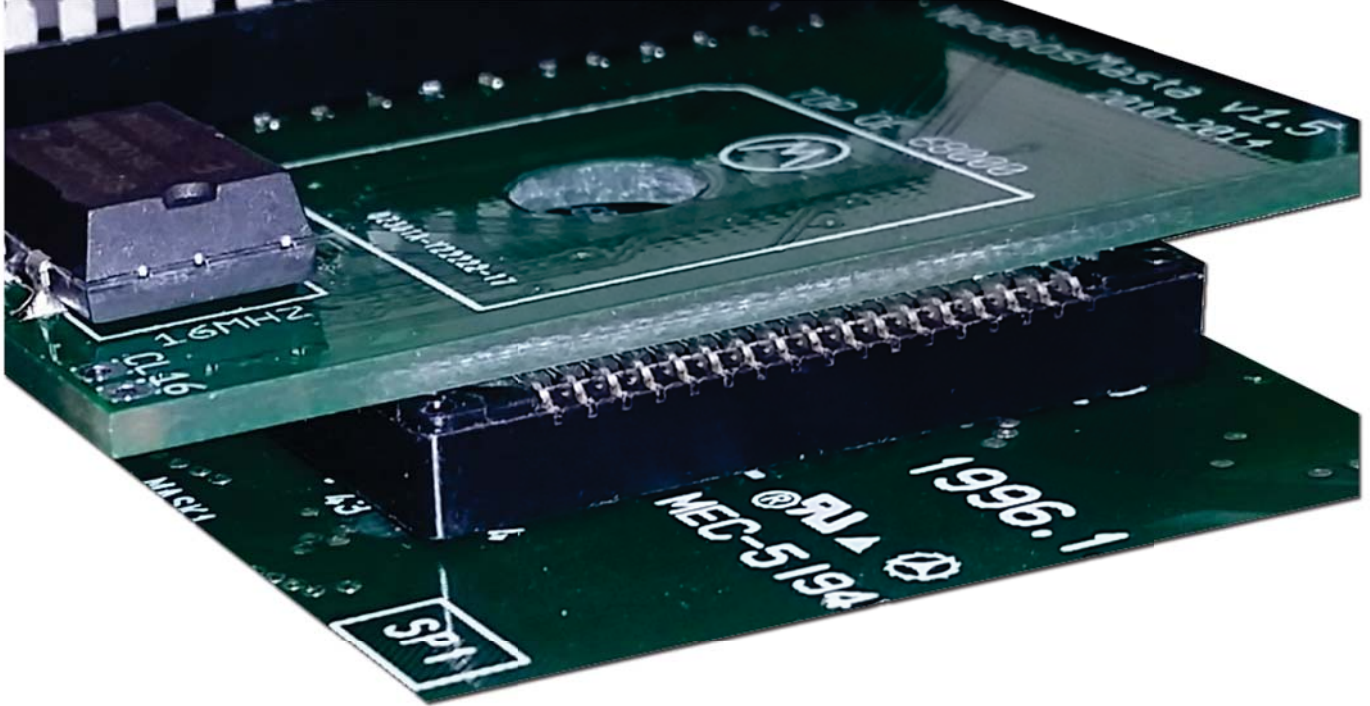

Before mounting NBM, you should disable the stock MVS bios. Motherboard specific instructions are after these mounting instructions.



Push NBM onto the 68K until it stops. Give it enough force that the socket is barely hovering over the motherboard. Make sure all sides of the 68k socket are hovering evenly over the motherboard.

It will have a tight fit, but for added strength, you can add a small amount of hot glue to the hole on top. I recommend doing this after you have confirmed your system is booting your new bios.



### MV-1C Install:

- Lift pins 10 and 12 of original BIOS "SP1"
- Solder wire from pin 10 to pin 21
- Solder CE pad to CE wire on NBM
- Solder OE pad to OE wire on NBM

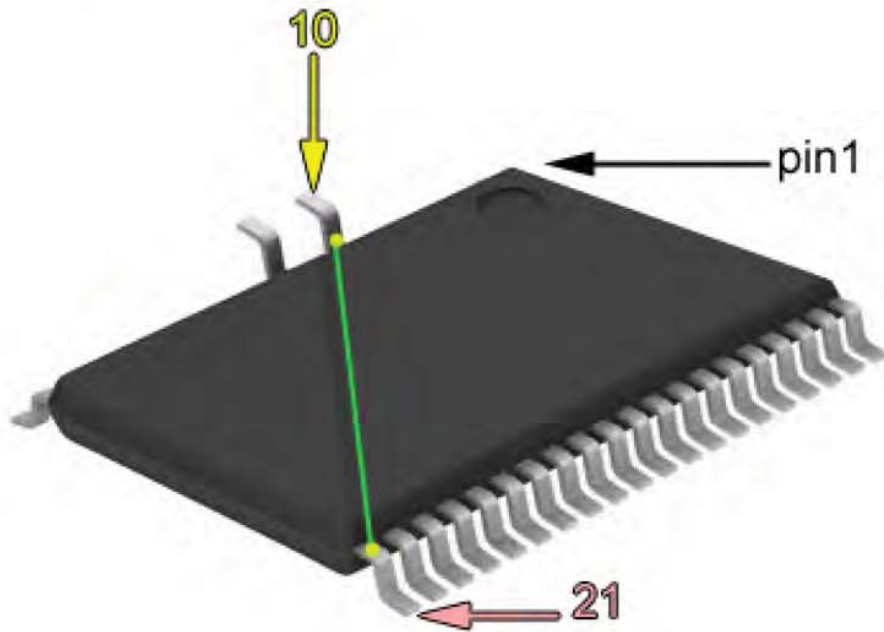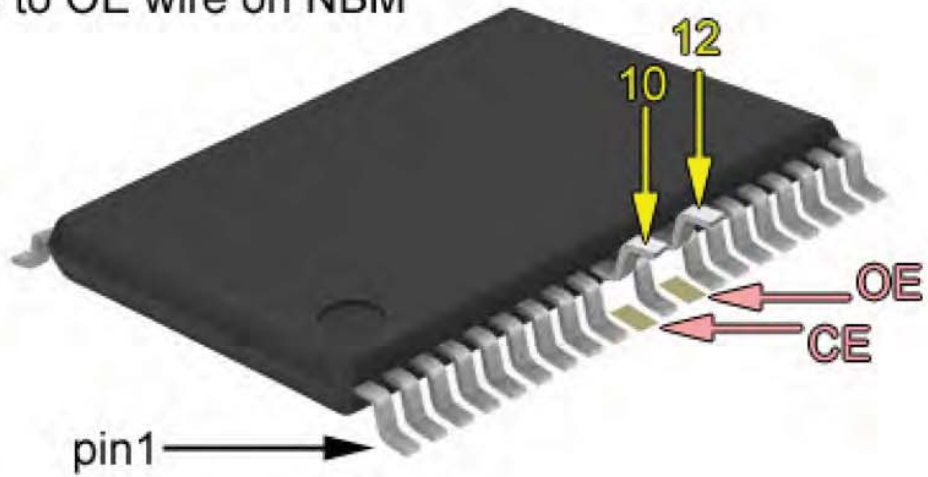

## MV-1B Install:

- Lift pins 2 and 20 of original BIOS "SP1"
- Put bead of solder between pins 1 & 2
- Solder CE pad to CE wire on NBM
- Solder OE pad to OE wire on NBM

