

Display



WORLDWIDE TECHNICAL BULLETINS FOR BROADCAST AND PROFESSIONAL PRODUCTS

Broadcast Products Technical Bulletin 20-2003-271

DATE: December 29, 2003

SUBJECT: NO PICTURE

MODEL: DESCRIPTION BKM-41HD/1 BKM-42HD/1 If there is no picture with HD-SDI input or from MONITOR OUT, BKM-142HD the coaxial cable connector may not be completely connected.

SERIAL NO:

WHERE TO CHECK C	CONNECTORS
------------------	------------

WNEKE		ININE	-10	ĸэ	
		<i>c</i>			

BKM-41HD/1	2,600,001-2,601,059
BKM-42HD/1	2,600,001-2,600,960
BKM-142HD	2,000,001-2,002,578

Check connectors at the following locations:

Model	Location	Qty
BKM-41HD	SDI assembly	2
BKM-42HD	SDI assembly	4
BKM-142HD	CN405 (BHA board)	1
BKM-142HD	BHB board	2

HOW TO CONNECT CONNECTORS

When the coaxial cable is disconnected during repair or periodic maintenance, ensure that the connector is reconnected firmly, until it locks with a clicking sound. (See Figure 1.)

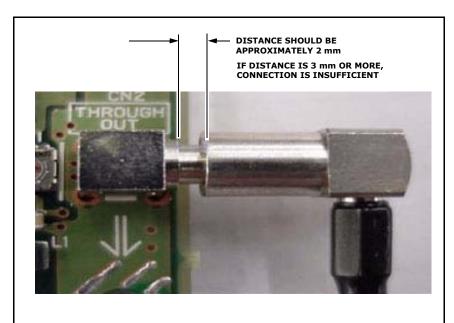


Figure 1

DPM003-043

Broadcast Professional Products Asia + Sony Australia + Broadcast Professional Products Europe + Sony Canada Ltd. + Sony Electronics Inc. USA + Sony Broadcast and Professional Latin America