



Video Products Technical Bulletin 30-2008-106

DATE: July 28, 2008

SUBJECT: MANUAL CORRECTION—C632 ON G BOARD

MODEL: PVM-14L5
 PVM-14L5/1
 PVM-14L5/2
 PVM-14L5/3
 PVM-14L5/4
 PVM-20L5
 PVM-20L5/1
 PVM-20L5/2
 PVM-20L5/3
 PVM-20L5/4
PVM-D14L5A
PVM-D14L5A/1
PVM-D14L5A/2
PVM-D14L5A/3
PVM-D20L5A
PVM-D20L5A/1
PVM-D20L5A/2

SERIAL NO: ALL

Italicized information in green applies to customers outside the United States.

DESCRIPTION

Correct the following manual as shown in Figure 1.

PVM-14L5, PVM-20L5, PVM-D14L5A, PVM-D20L5A Service Manual, 1st Edition (Rev. 1)


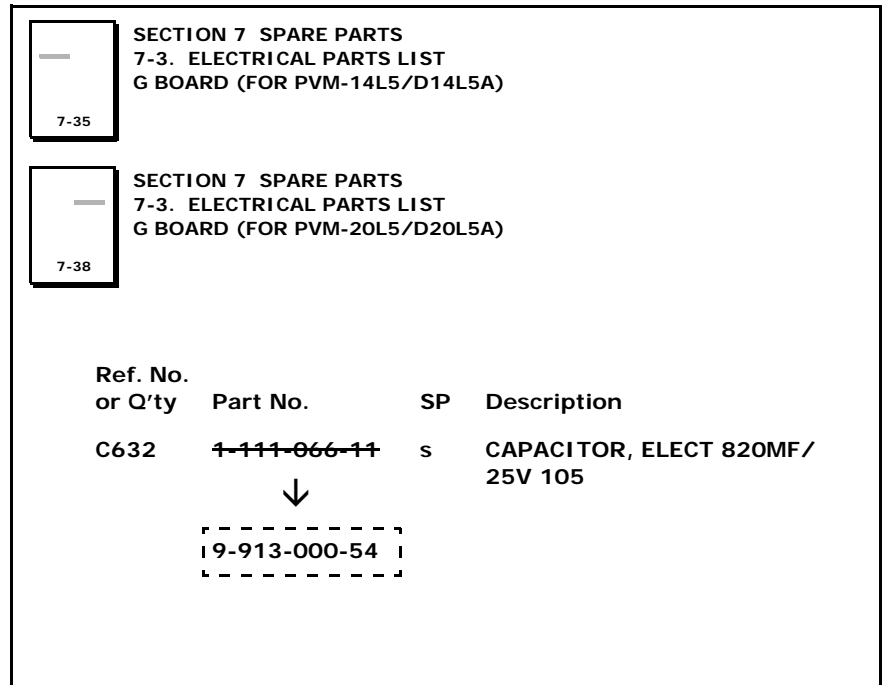


Figure 1

NOTE:

- When replacing C632 (820 μF/25V, 105) on the G board, order part number 9-913-000-54.
- Do not order part number 1-111-066-11 (as specified in the service manual), which is too large and may contact nearby heat-dissipating parts, resulting in damage.
- Do not order original part number 1-115-787-11 because the capacitor with part number 1-111-066-11 will be supplied automatically as a substitute.
- The capacitor 9-913-000-54 is equivalent to the original capacitor 1-115-787-11. (See Figure 2.)

G BOARD

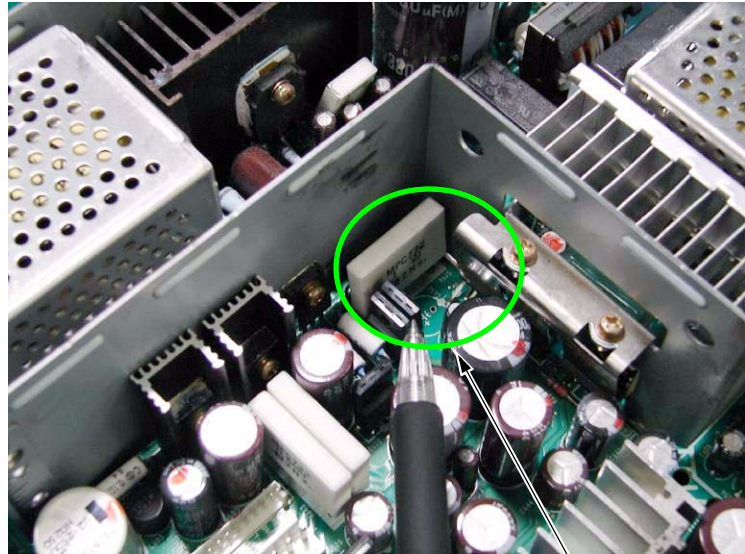

C632

DO NOT USE



ORIGINAL CAPACITOR
820 µF/25V, 105°C
(10 mm DIAMETER x 30)



CAPACITOR IN SERVICE MANUAL
(1-111-066-11)
820 µF/25V, 105°C (12.8 mm DIAMETER x 20)

Figure 2

ORDERING INFORMATION

To order parts online, go to: <http://www.sony.com/servicesplus>.
For service or parts ordering assistance, refer to the following document, which lists all contact telephone numbers:

Technical Bulletin 00-1999-000