



Video Products Technical Bulletin 30-2012-054

DATE: **May 21, 2012**SUBJECT: **TALLY CANNOT BE TURNED OFF**MODEL: **BVM-E170
BVM-F170****DESCRIPTION**

The tally keeps lighting when power is turned ON, and the tally cannot be turned OFF, even if the tally is set to OFF with the parallel remote.

SERIAL NO:

BVM-E170 7,000,001-7,000,290

7,200,001-7,200,007

BVM-F170 7,000,001-7,000,043

PARTS REQUIRED

Part No.	Description	Qty.
7-600-012-86	Polyamide Insulation Tape (33m roll) (or equivalent) (5 mm × 5 mm piece required)	1

ORDERING INFORMATION

To order parts online, go to: www.sony.com/servicesplus. For service or parts ordering assistance, refer to the following document, which lists all contact telephone numbers:

Technical Bulletin 00-1999-000

MODIFICATION PROCEDURE

NOTE: Refer to the service manual for disassembly details.

1. Remove the BZL frame and OLED module.
2. Remove the YA board from the BZL frame, and remove the harness from the YA board.
3. Affix a 5 mm × 5 mm piece of insulation tape to the area shown in Figure 1.
NOTE: The tape prevents the boss on the top plate from touching the trace.
4. Reinstall the harness to the YA board, and reinstall the YA board to the BZL frame.
5. Reassemble the unit.


CONFIRMATION

1. Confirm that the tally does not light when power is turned ON.
2. Confirm that tally commands from the remote controller operate correctly.

DPMO12-003

YA BOARD

BOSS TOUCHES TRACE HERE

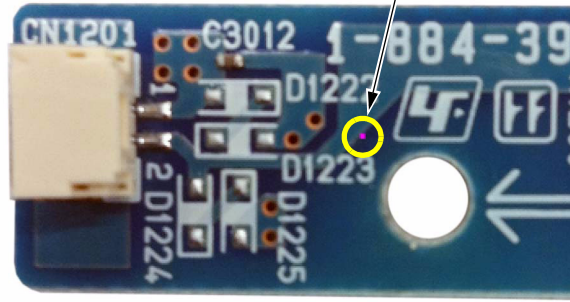

ADD INSULATION TAPE

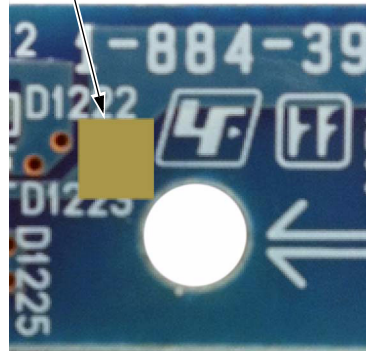


Figure 1